Electric seat adjustment without memory function

from 2002 m. y.

4-Pin Relay Carrier with threaded connection

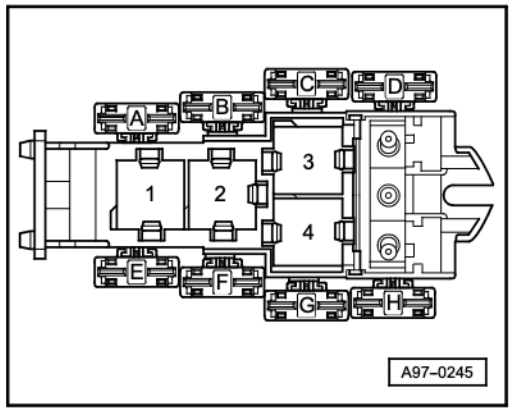

9-Pin Relay Carrier in the instrument panel

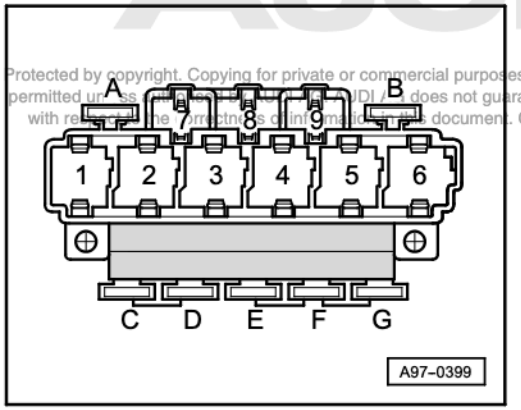

Protected by copyright. Copying for private or commercial purposes, in part or whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Fuse Location:

E Power Seat Fuse (S45)

Fuse holder

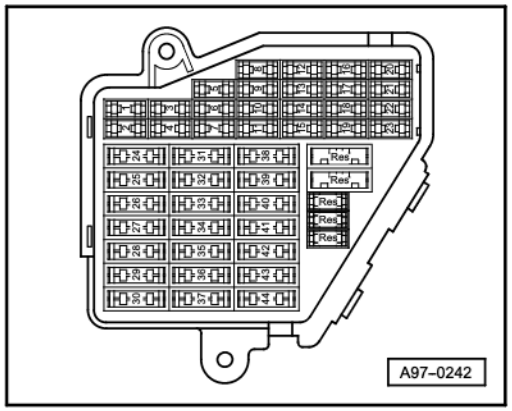

Fuse Colors

30 A - Green
25 A - White
20 A - Yellow
15 A - Blue
10 A - Red
7,5A - Orange
5A - Beige

Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.

Connector point, A pillar, on right hand-side

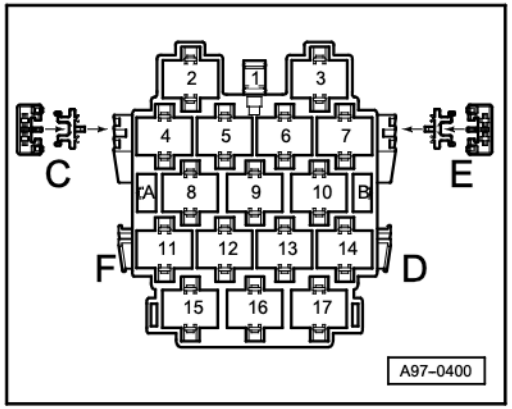

Fuse Location:

E - Power Seat Fuse (S46)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

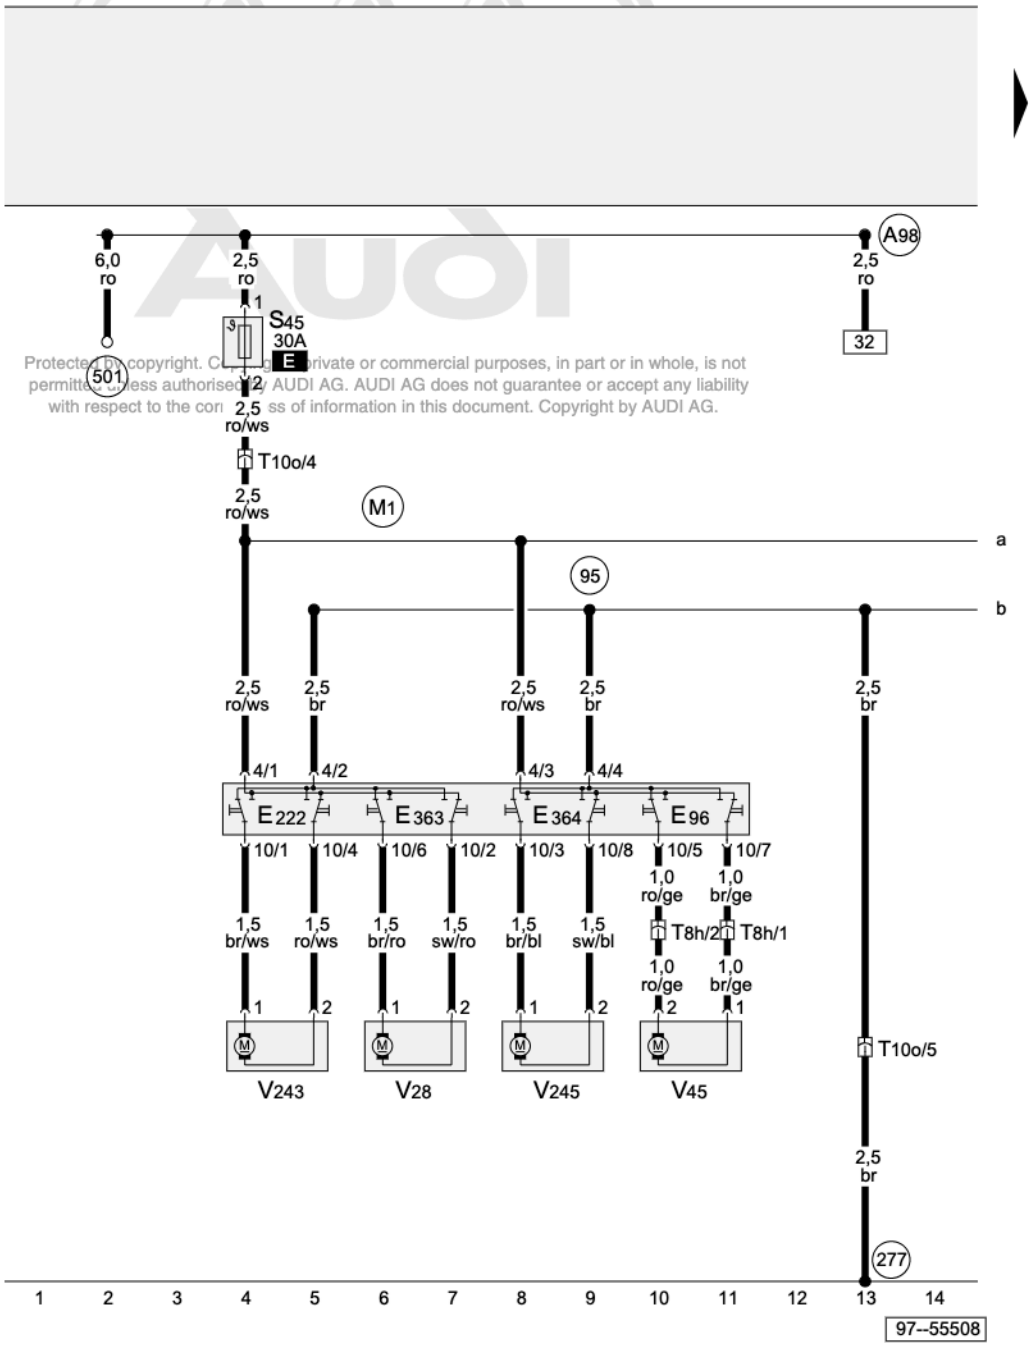

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Power Seat driver seat, fuse

E96	Driver's Backrest Adjustment Switch
E222	Switch for slope adjustment, driver seat
E363	Driver's Seat Fore/Aft Switch
E364	Driver's Seat Height Adjustment Switch
S45	Power Seat Fuse
T8h	8-Pin Connector, on driver seat, seat backrest
T10o	10-Pin Connector, red, wiring seat connector station, driver Seat
V28	Driver's Seat Fore/Aft Switch
V45	Motor for seatback adjustment, driver seat
V243	Driver's Seat Inclination Adjustment Motor
V245	Driver's Seat Height Adjustment Motor
95	Ground connection -1-, in power seat wiring harness
277	Ground connection -3-, in wiring harness interior
501	Threaded connection -2- (30), on the relay plate
A98	Plus connection -4- (30), in instrument panel wiring harness
M1	Plus connection -1- (30), in power seats wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Driver's Seat Lumbar Support Adjustment

E176	Driver's Seat Lumbar Support Adjustment Switch
N199	Igniter for side airbag, driver's side
T8h	8-Pin Connector, on driver seat, seat backrest
V125	Driver's seat lumbar support curvature adjustment motor
V129	Driver's seat lumbar support height adjustment motor
95	Ground Connection 1, in power seat wiring harness
M1	Plus Connection 1 (30), in power seats wiring harness
*	⇒ Current wiring diagram for airbag

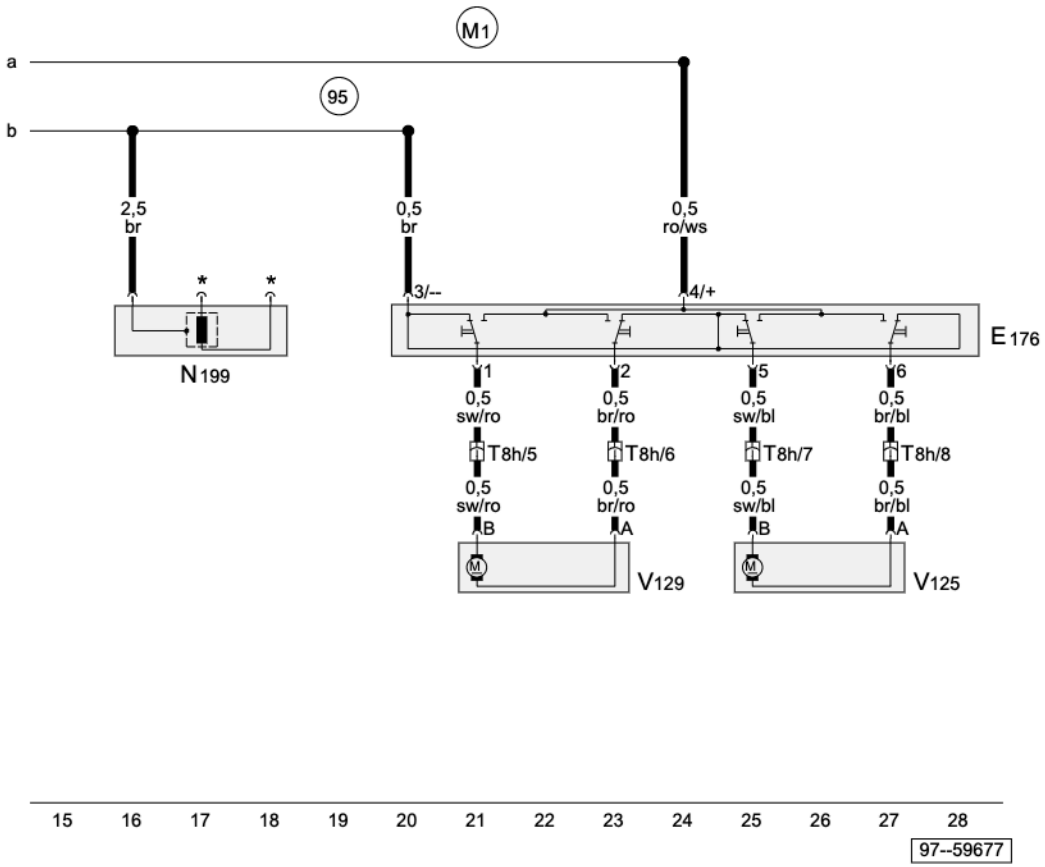

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front Passenger's Power Seat Adjustment

E64	Front Passenger's Seat Fore/Aft Adjusting Switch
E98	Passenger Backrest Adjustment Switch
E334	Front Passenger's Seat Tilt Adjustment Button
E365	Front Passenger's Seat Height Adjustment Switch
S46	Front Passenger's Power Seat Adjustment Circuit Breaker 1
T8i	8-Pin Connector, on passenger seat, seat backrest
T10p	10-Pin Connector, red, seat wiring connector station, passenger's seat
V31	Front Passenger's Seat Fore/Aft Adjusting Motor
V46	Front Passenger's Backrest Adjusting Motor
V244	Front Passenger's Seat Inclination Adjustment Motor
V246	Front Passenger's Seat Height Adjustment Motor
140	Ground Connection 2, in power seat wiring harness
249	Ground Connection 2, in wiring harness interior
M2	Plus Connection 2 (30), in power seats wiring harness

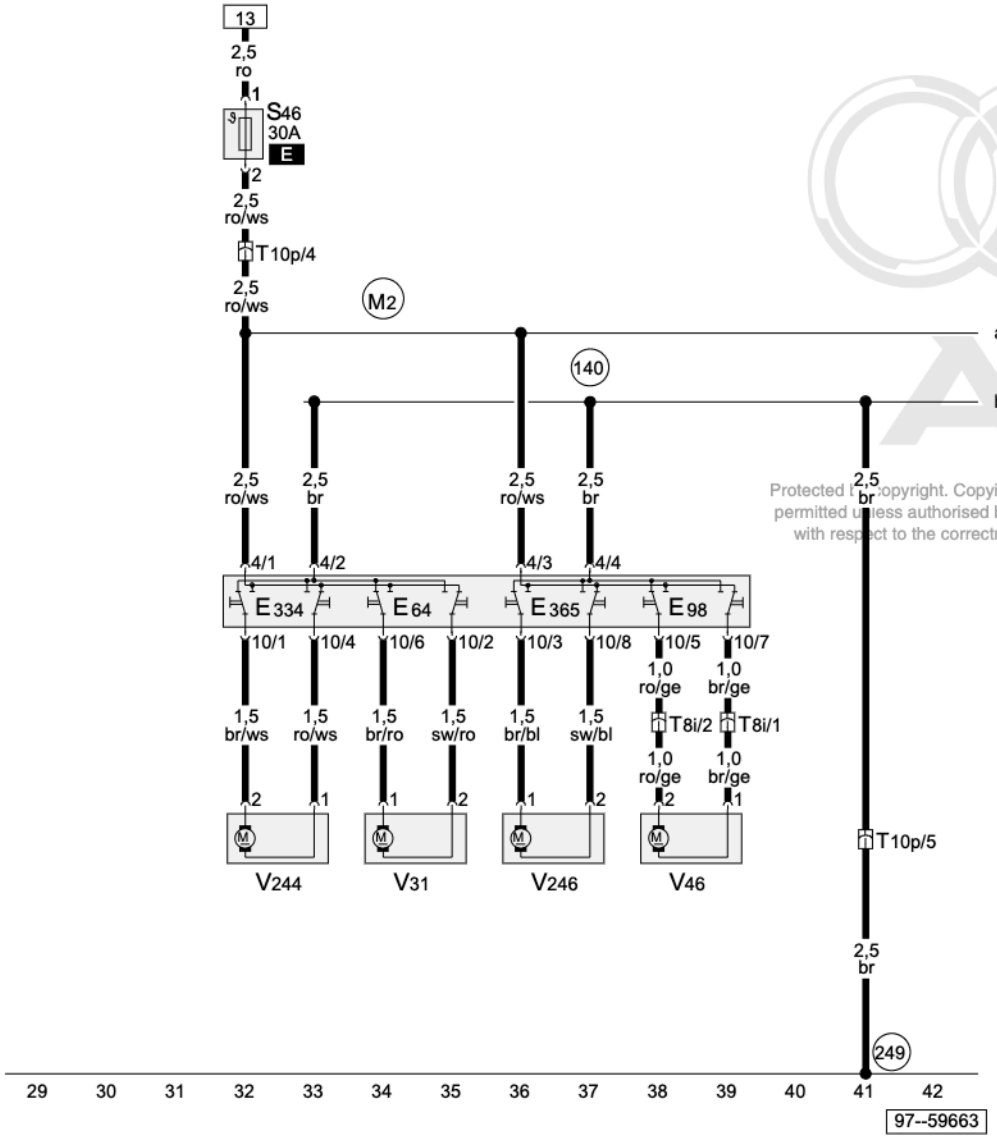

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front Passenger's Seat Lumbar Support Adjustment

E177	Front Passenger's Seat Lumbar Support Adjustment Switch
N200	Igniter for side airbag, passenger side
T8i	8-Pin Connector, on passenger seat, seat backrest
V126	Front passenger seat lumbar support curvature adjustment motor
V130	Front passenger seat lumbar support height adjustment motor
140	Ground Connection 2, in power seat wiring harness
M2	Plus Connection 2 (30), in power seats wiring harness
*	⇒ Current wiring diagram for airbag

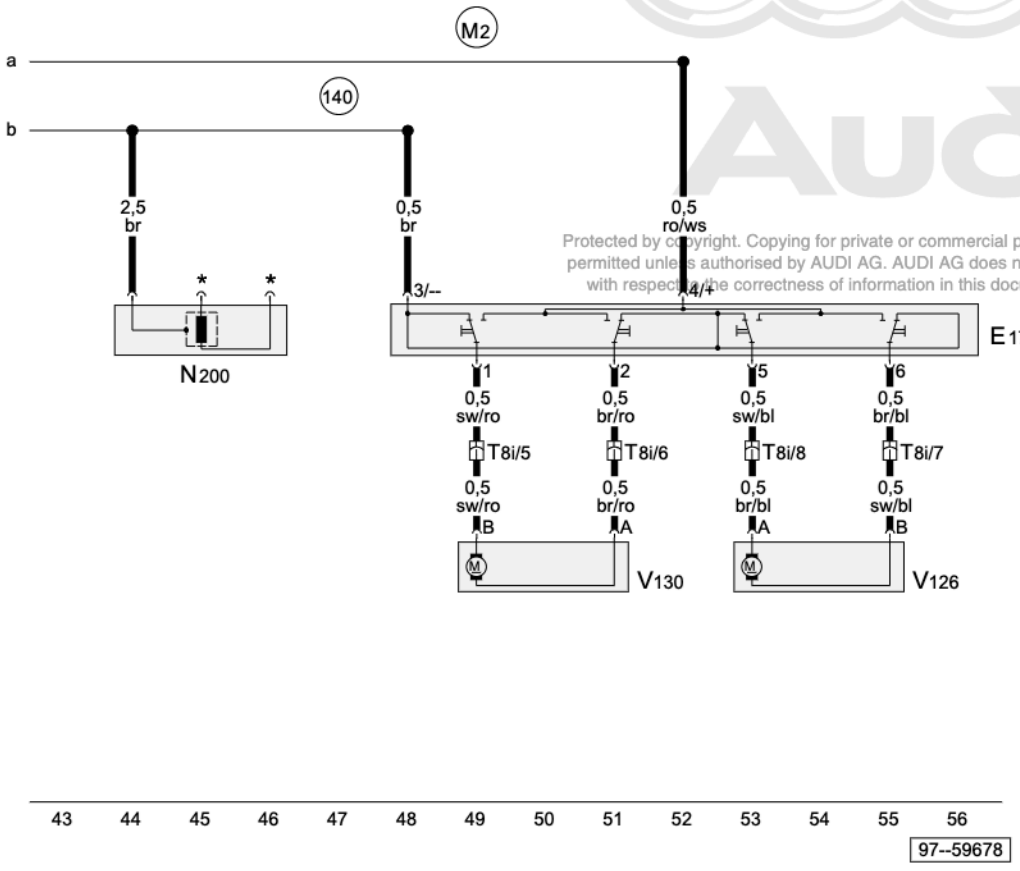

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink